EQUINOX

www.prolight.co.uk

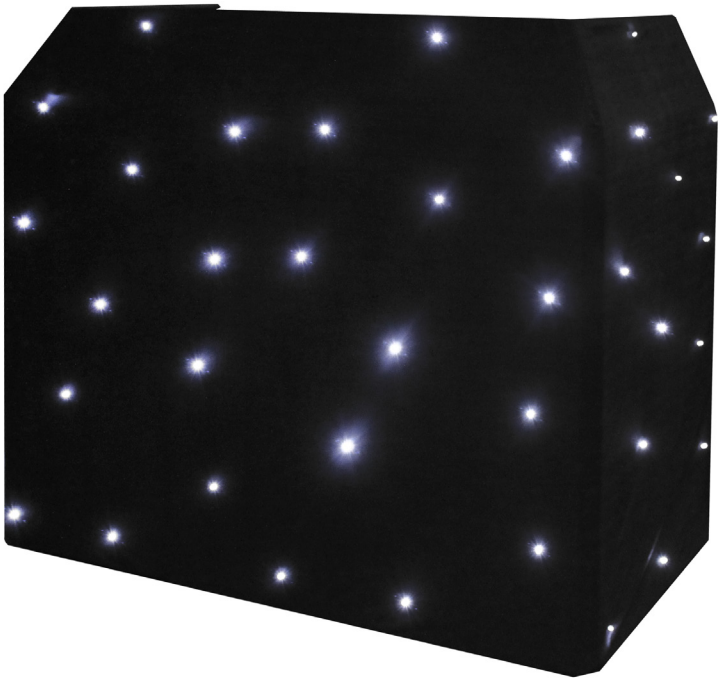

DJ Booth LED Starcloth

Code: EQLED12B

USER MANUAL

WARNING

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!

CAUTION!

Keep this equipment away from rain, moisture and liquids.

SAFETY INSTRUCTIONS

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual

CAUTION! TAKE CARE USING THIS EQUIPMENT!
HIGH VOLTAGE-RISK OF ELECTRIC SHOCK!!

Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Only use the equipment indoors.
- Do not expose to flammable sources, liquids or gases.
- Cleaning must be done at regular intervals.
- Before cleaning, wait until the unit has cooled.
- Use a vacuum or dry compressed air and a soft brush to remove the dust collected on the external vents and accessible internal components.
- Clean the external surfaces with a mild solution of non-ammonia glass cleaner or isopropyl alcohol and wipe with a soft, lint free cotton cloth or lense cleaning tissue.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 220V/240V.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- If the equipment has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation might damage the equipment. Leave the equipment switched off until it has reached room temperature.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY; One year from date of purchase.
- Equinox products are designed and intended for professional use only by competent persons. The products are not suitable for domestic use.

OPERATING DETERMINATIONS

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks etc.

Do not endanger your own safety and the safety of others!
Incorrect installation or use can cause serious damage to people and property.

You should find inside the Equinox carton the following items:

1, DJ Booth LED Starcloth 2, Instruction manual 3, Power cable 4, Controller

Technical Specifications:

Cloth:
72 x 5mm white LEDs
Velcro tabs on 3 sides
Low reflection material
Fire retardant material

Controller:
DMX Channels: 5
Sound active, auto run, auto fade, full on and DMX control modes
IEC power connection
3-pin XLR in/out sockets
Dipswitch DMX address selection
Power Consumption: 32W
Power supply: 220-240V ~ 50/60Hz
Dimensions: 250 x 129 x 65mm
Weight: 1.7kg

Identification:
1, DMX in socket
2, DMX out socket
3, Dipswitches
4, Speed/sensitivity control
5, Programme selector
6, Built in microphone
7, Cloth output socket
8, On/off switch
9, IEC power in socket
10. Mains Fuse

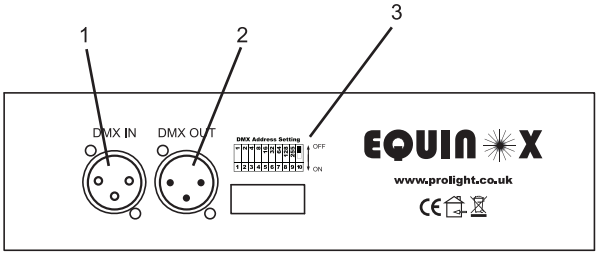

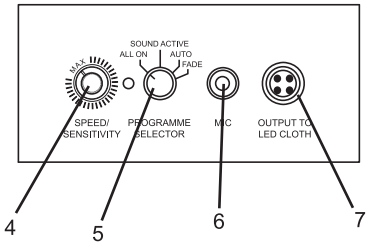

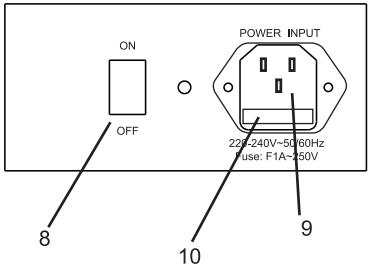

Fitting instructions:

The cloth is designed to be fitted to the Equinox DJ Booth (EQLED12).

Fit the cloth from one upper corner first by hanging one of the sewn in pockets onto the booth.

Carefully unfold the cloth and attach the opposite corner, again by the sewn in pocket,

Once attached by the corners the cloth must be then tensioned using the integral velcro straps.

Operations:

For the below operations to work dipswitch 10 must be set to the **"ON" position.**

Full on:
To set the LED starcloth to full on, turn the programme control to the **"FULL ON"** setting.

Sound active:
To set the LED starcloth to sound active, turn the programme control to the **"SOUND"** setting.
To adjust the sensitivity, turn **"SPEED/SENSITIVITY"** control to the desired sensitivity level.

Auto run:
To set the LED starcloth to auto, turn the programme control to the **"AUTO"** setting.
To adjust the speed of the auto run, turn **"SPEED/SENSITIVITY"** control to the desired speed level.

Auto fade:
To set the LED starcloth to fade, turn the programme control to the **"FADE"** setting.
To adjust the speed of the fade, turn **"SPEED/SENSITIVITY"** control to the desired speed level.

DMX:
To set the LED starcloth into DMX set dipswitch 10 to the **"OFF"** position. Now use dipswitches 1 - 9 to set the DMX address from 001-512. For DMX function please see overleaf.

DMX chart:

Channel	Value	Function
1	0-20	No function
	21-230	Flash speed
	231-255	Full on
2	0-20	No function
	21-230	Flash speed
	231-255	Full on
3	0-20	No function
	21-230	Flash speed
	231-255	Full on
4	0-20	No function
	21-230	Flash speed
	231-255	Full on
5	0-100	All channels flash at speed set by above
	101-255	All channels full on

DMX-512:
• DMX (Digital Multiplex) is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions form the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA “IN” and DATA “OUT” XLR terminals located on all DMX fixtures (most controllers only have a data “out” terminal).

DMX Linking:
• DMX is a language allowing all makes and models of different manufactures to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned to a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

DATA Cable (DMX cable) requirements (for DMX operation):
• The Equinox DJ Booth LED Starcloth can be controlled via DMX-512 protocol. The DMX address is set on the back of the unit. Your unit and your DMX controller require a standard 3-pin XLR connector for data input/output (figure 1).

Figure 1

Further DMX cables can be purchased from all good sound and lighting suppliers or Prolight dealers.
Please quote:
CABL10 – 2M
CABL11 – 5M
CABL12 – 10M

Also remember that DMX cable must be daisy chained and cannot be split.

Notice:

• Be sure to follow figures 2 & 3 when making your own cables. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behaviour.

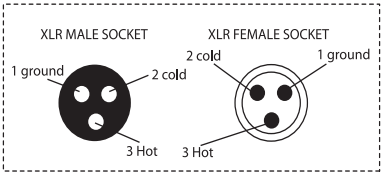

FIGURE 3

XLR Pin Configuration
Pin 1 = Ground
Pin 2 = Negative
Pin 3 = Postive

FIGURE 2

Special Note: Line termination:

• When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.

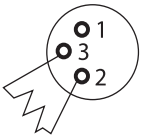

Termination reduces signal transmission problems and interferance. it is always advisable to connect a DMX terminal, (resistance 120 Ohm 1/4 W) between pin 2 (DMX-) and pin 3 (DMX+) of the last fixture.

Using a cable terminator (part number CABL90 3-pin, CABL89 5-pin) will decrease the possibilities of erratic behaviour.

5-Pin XLR DMX Connectors:

• Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-Pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The Chart below details the correct cable conversion.

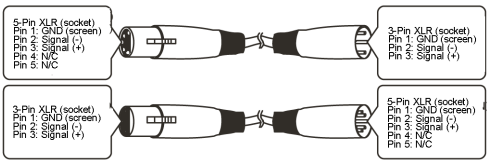

DMX Dip Switch Quick Reference Chart:

Dip Switch Position

DMX DIP SWITCH SET 0=OFF 1=ON					#9	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
					#8	0	0	0	0	1	1	1	1	0	0	0	0	1	1	1	1
					#7	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1
					#6	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1
#1	#2	#3	#4	#5																	
0	0	0	0	0			32	64	96	128	160	192	224	256	288	320	352	384	416	448	480
1	0	0	0	0		1	33	65	97	129	161	193	225	257	289	321	353	385	417	449	481
0	1	0	0	0		2	34	66	98	130	162	194	226	258	290	322	354	386	418	450	482
1	1	0	0	0		3	35	67	99	131	163	195	227	259	291	323	355	387	419	451	483
0	0	1	0	0		4	36	68	100	132	164	196	228	260	292	324	356	388	420	452	484
1	0	1	0	0		5	37	69	101	133	165	197	229	261	293	325	357	389	421	453	485
0	1	1	0	0		6	38	70	102	134	166	198	230	262	294	326	358	390	422	454	486
1	1	1	0	0		7	39	71	103	135	167	199	231	263	295	327	359	391	423	455	487
0	0	0	1	0		8	40	72	104	136	168	200	232	264	296	328	360	392	424	456	488
1	0	0	1	0		9	41	73	105	137	169	201	233	265	297	329	361	393	425	457	489
0	1	0	1	0		10	42	74	106	138	170	202	234	266	298	330	362	394	426	458	490
1	1	0	1	0		11	43	75	107	139	171	203	235	267	299	331	363	395	427	459	491
0	0	1	1	0		12	44	76	108	140	172	204	236	268	300	332	364	396	428	460	492
1	0	1	1	0		13	45	77	109	141	173	205	237	269	301	333	365	397	429	461	493
0	1	1	1	0		14	46	78	110	142	174	206	238	270	302	334	366	398	430	462	494
1	1	1	1	0		15	47	79	111	143	175	207	239	271	303	335	367	399	431	463	495
0	0	0	0	1		16	48	80	112	144	176	208	240	272	304	336	368	400	432	464	496
1	0	0	0	1		17	49	81	113	145	177	209	241	273	305	337	369	401	433	465	497
0	1	0	0	1		18	50	82	114	146	178	210	242	274	306	338	370	402	434	466	498
1	1	0	0	1		19	51	83	115	147	179	211	243	275	307	339	371	403	435	467	499
0	0	1	0	1		20	52	84	116	148	180	212	244	276	308	340	372	404	436	468	500
1	0	1	0	1		21	53	85	117	149	181	213	245	277	309	341	373	405	437	469	501
0	1	1	0	1		22	54	86	118	150	182	214	246	278	310	342	374	406	438	470	502
1	1	1	0	1		23	55	87	119	151	183	215	247	279	311	343	375	407	439	471	503
0	0	0	1	1		24	56	88	120	152	184	216	248	280	312	344	376	408	440	472	504
1	0	0	1	1		25	57	89	121	153	185	217	249	281	313	345	377	409	441	473	505
0	1	0	1	1		26	58	90	122	154	186	218	250	282	314	346	378	410	442	474	506
1	1	0	1	1		27	59	91	123	155	187	219	251	283	315	347	379	411	443	475	507
0	0	1	1	1		28	60	92	124	156	188	220	252	284	316	348	380	412	444	476	508
1	0	1	1	1		29	61	93	125	157	189	221	253	285	317	349	381	413	445	477	509
0	1	1	1	1		30	62	94	126	158	190	222	254	286	318	350	382	414	446	478	510
1	1	1	1	1		31	63	95	127	159	191	223	255	287	319	351	383	415	447	479	511

Dip Switch position **DMX Address**

Notes:

Notes:

English

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with seperate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please seperate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

EQUINOX

www.prolight.co.uk